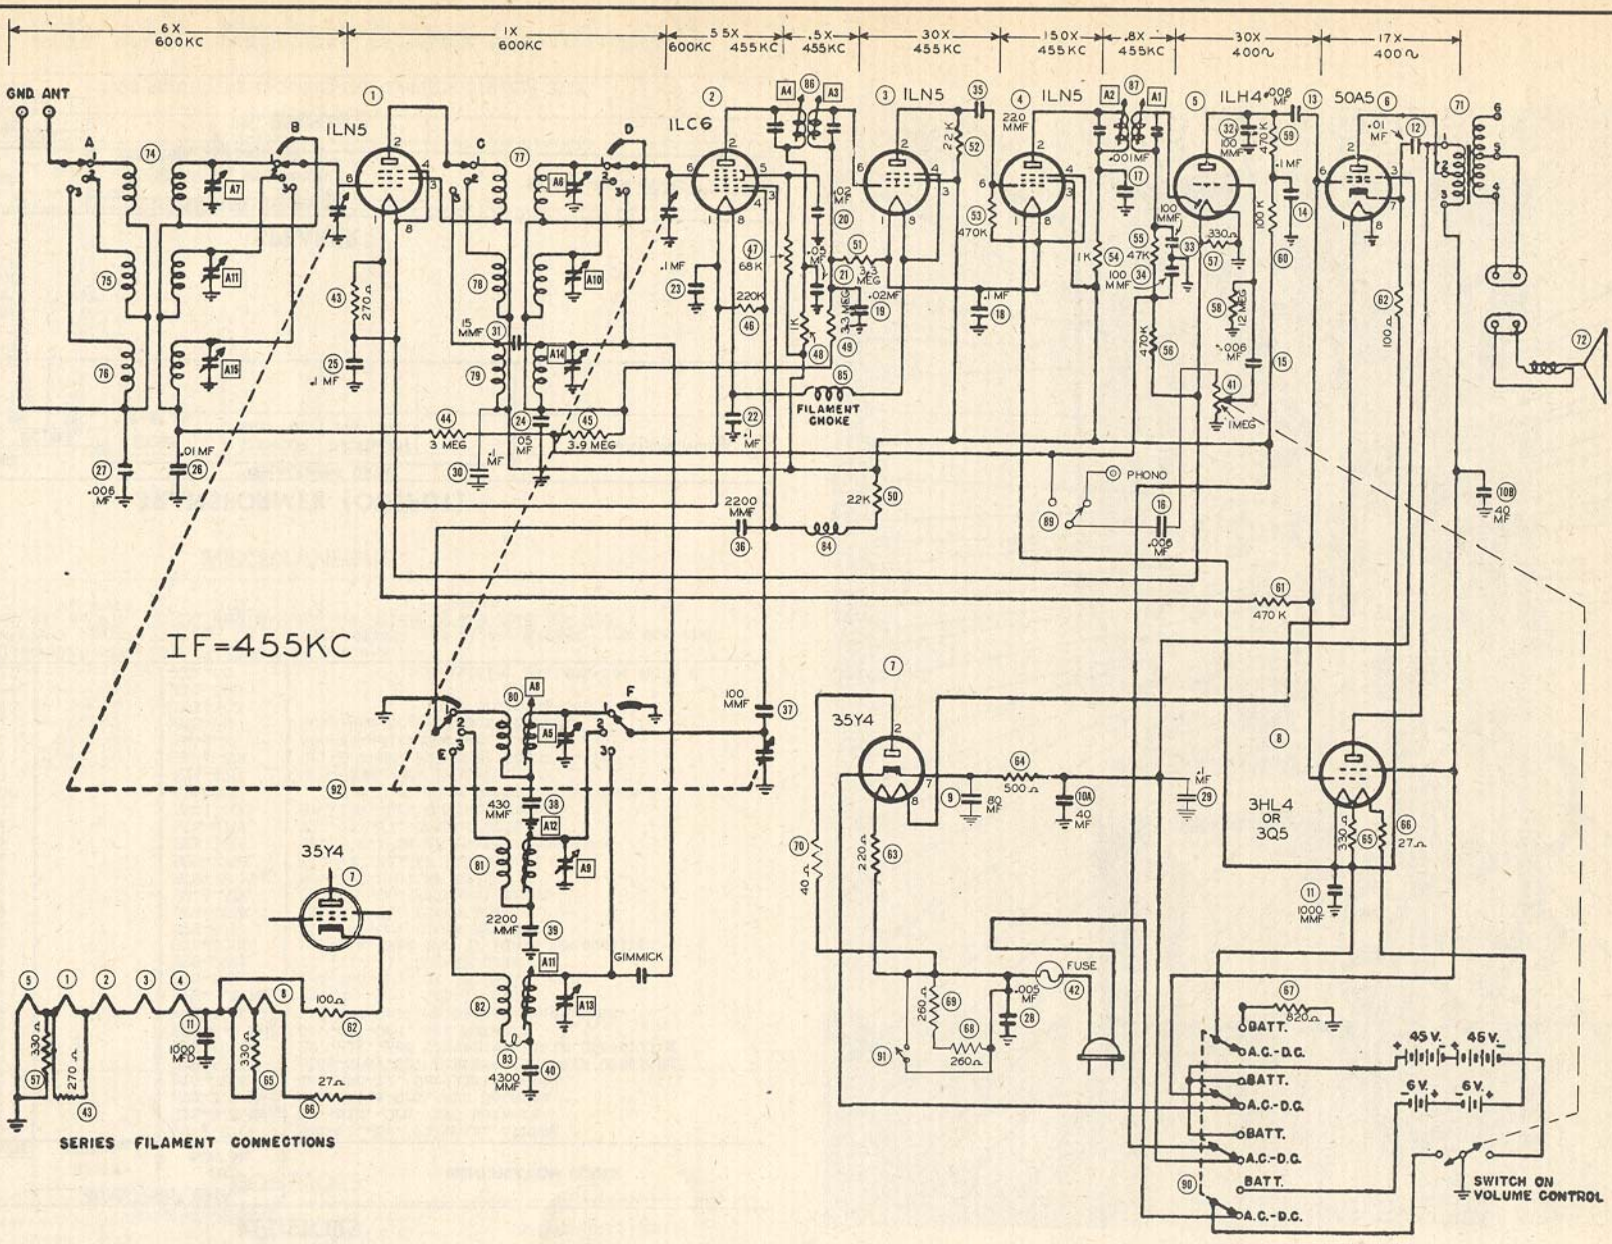

THE COOPERATION OF THE MANUFACTURER OF THIS RECEIVER MAKES IT POSSIBLE TO BRING YOU THIS SERVICE 474-10

The stage gain measured values listed above are approximate values for an average operative stage, rather than an absolute value. It should be borne in mind that it is possible to introduce so many variables into the measurement operation, such as, type of equipment used for measuring, handling and placement of probes, the accuracy of alignment, etc., that an absolute reading is impractical. AVC is made inoperative by shorting diode load resistor.